

TTARTISAN

J01

Wireless Flash Trigger

User Manual

Please read this manual carefully before use


Specifications

Model	J01	Compatible Flash	TTARTISAN Flash
Battery	Built-in Lithium Battery	Channel	Exclusive Channel
Charging Method	Type-C Charging	Signal Range	Range 3m
Size	16*31*42mm	Weight	18g

Compatible Cameras

Fujifilm, Nikon, Sony, Canon, Pentax, Olympus, Leica, Ricoh, and other cameras with a hot shoe mount.

Note: Not compatible with cameras lacking a hot shoe mount, such as the Panasonic S9 and older film cameras.

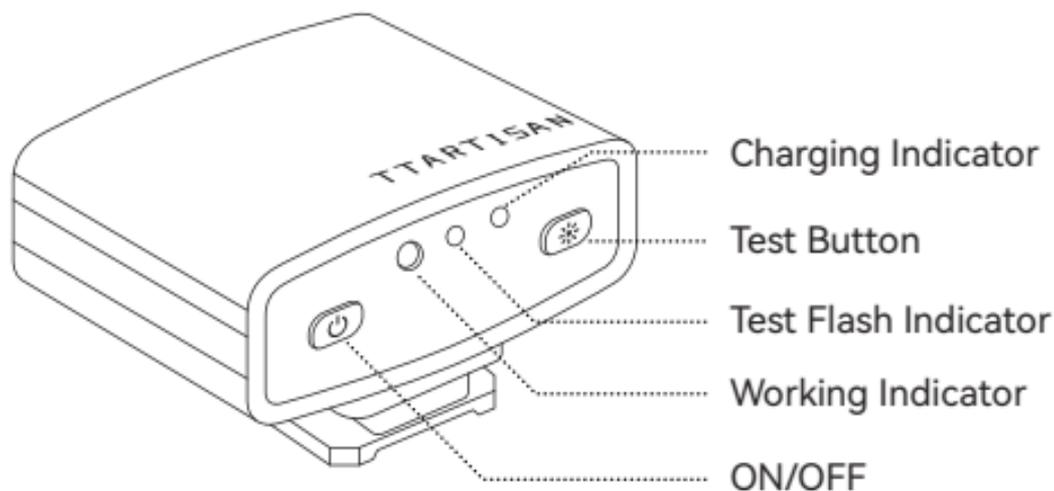

Instructions

① Install and Operate the Trigger:

Open the package and insert the trigger into the camera's hot shoe mount. Press and hold the on/off button for 1s until the working indicator light turns on, then the trigger works.

② Equipment Installation:

When the trigger is working, press and hold the on/off button for 1s until the working indicator light turns off, then the trigger stops working.

Precautions

If the device is not used for a long time, please store it in a dry place.

The warranty is one years from the date of purchase.

The following conditions are not covered by our warranty service:

1. Counterfeit and anti-control products of our company.
2. Accidental or man-made damage, water intake, bumps, etc.
3. Unable to provide proof of purchase such as receipts, order numbers, etc.
4. The purchase date of the product exceeds the warranty period.



www.ttartisan.com